

maxell® XLII 90

POSITION · IEC TYPE II · HIGH[CrO₂]

maxell® XLII 90

POSITION
IEC TYPE II
HIGH[CrO₂]

TAPE SELECTOR	BIAS	EQ	RECORDING TIME
HIGH[CrO ₂] (IEC TYPE II)	HIGH[CrO ₂]	70 μ s	90min. (2 x 45)

● Crystal-clear sound

The use of Maxell's Extra Fine Epitaxial magnetic particles has improved MOL and output by 1 dB over the entire frequency range. (Compared with our UDS-II tape)

● PA (Phase Accuracy) cassette mechanism

The newly developed PA cassette mechanism assures minimized phase difference and extra-high fidelity, live sound reproduction.


MAXELL FULL WARRANTY We warrant to the user of this product that it is free from defective materials and workmanship. If the product proves unsatisfactory, it will be replaced if returned to the address below. *Manufacturer, distributor and seller shall not be liable for consequential commercial damages.*

Maxell Corporation of America
60 Oxford Drive, Moonachie, New Jersey 07074

Made in Japan

Maxell Cassette Tape Features


In the cassette Maxell adapts the unique 4-function leader to incorporate the cleaning properties of its original head cleaning tape. The special finish assures continuous cleaning without fear of head wear.

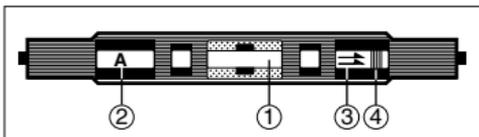

- ① Non-abrasive head cleaning leader tape.
- ② Indicates A or B side ready to play.
- ③ Arrows indicate direction of tape travel.
- ④ 5-second cueing line.

Handling/Storage Instructions

- To prevent the tape from developing trouble in travel, take up any slack in the cassette by using a pencil stub as shown in the illustration.
- Break off the breakout lugs from the cassette to prevent the recorded material from accidental erasing.
- To assure smooth tape travel and high quality recording/playback, periodical cleaning of the heads and capstans is recommended.
- Store the cassettes in their plastic bases after use. During storage, keep them from heat, humidity, magnetic fields and dust.

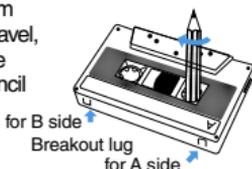

Maxell Corporation of America
PROOF OF PURCHASE

maxell
XLII 90